

BLOWER MOTOR RESISTORS

What does the Blower Motor Resistor do?

The Blower Motor Resistor regulates the amount of hot or cold air that comes from the vehicles interior vents. When the fan control on the dash is adjusted that in turn sends a current to the Blower Motor Resistor which adjust the fan speed increasing or decreasing the amount of air.

Where is the Blower Motor Resistor located?

The Blower Motor Resistor is located under the dash, attached to or inside the blower motor fan housing.

Will a malfunctioning Blower Motor Resistor cause a check engine light?

In most cases no, but with newer vehicle having more elaborate systems that check and double check the status of the vehicle's systems it is possible that a faulty Blower Motor Resistor could cause a warning light or code on the vehicle's information system display.

What are the common causes of failure?

Often the Blower Motor Resistor will fail due to excessive wear on the Blower Motor itself or an incorrect current being sent to the resistor.

How to determine if a Blower Motor Resistor is failing?

Signs of a failing Blower Motor Resistor may be weak or erratic airflow from the vents or the fan only blows at certain speeds or no airflow at all.

What makes Holstein Parts Blower Motor Resistor the Best?

- Holstein Parts uses only the highest quality materials and engineering for parts that are truly built to match or exceed the OE part.
- Holstein Parts Blower Motor Resistors offer superior coverage for domestic and import applications.
- 3 Year / 36,000 Mile Warranty on all Holstein Parts Blower Motor Resistors